


Service Parts List **ELISE**




Function Code 42.01 Airboxes, Trunking & Air Filters

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Air Cleaner Housing Assembly			A111E0015K	1
02	Air Cleaner Element			A111E6022S	1
03	Flexible Hose, air cleaner to throttle body			A111E6010F	1
04	Hose Clip, hose to air cleaner			A075L6044F	1
05	Hose Clip, hose to throttle body			A111E6024F	1
06	Mounting Bracket Assy., air cleaner			A117E0071F	1
07	Grommet, air cleaner lower mounting			A111E6018F	1
08	Grommet, air cleaner upper mounting			A111E6017F	2
09	Pin, air cleaner retention			A111E6012F	2
10	Screw, M6, hex. hd., bracket to roll-over bar stay				2
11	Washer, spring, M6,			A907E6258F	2
12	Washer, flat, M6				2
13	Setscrew, M6 x 22, hex. hd., filter to bracket			A082W1111F	1
14	Washer, spring, M6			A079W4035Z	1
15	Insert, grommet fix.			A089U1518F	1
16	Bracket Assy., intake hose fix.	Includes items: 17,19,20		A117E0012F	1
17	Cradle Clip, cable tie fix.			A082W6293F	2
18	Cable Tie				2

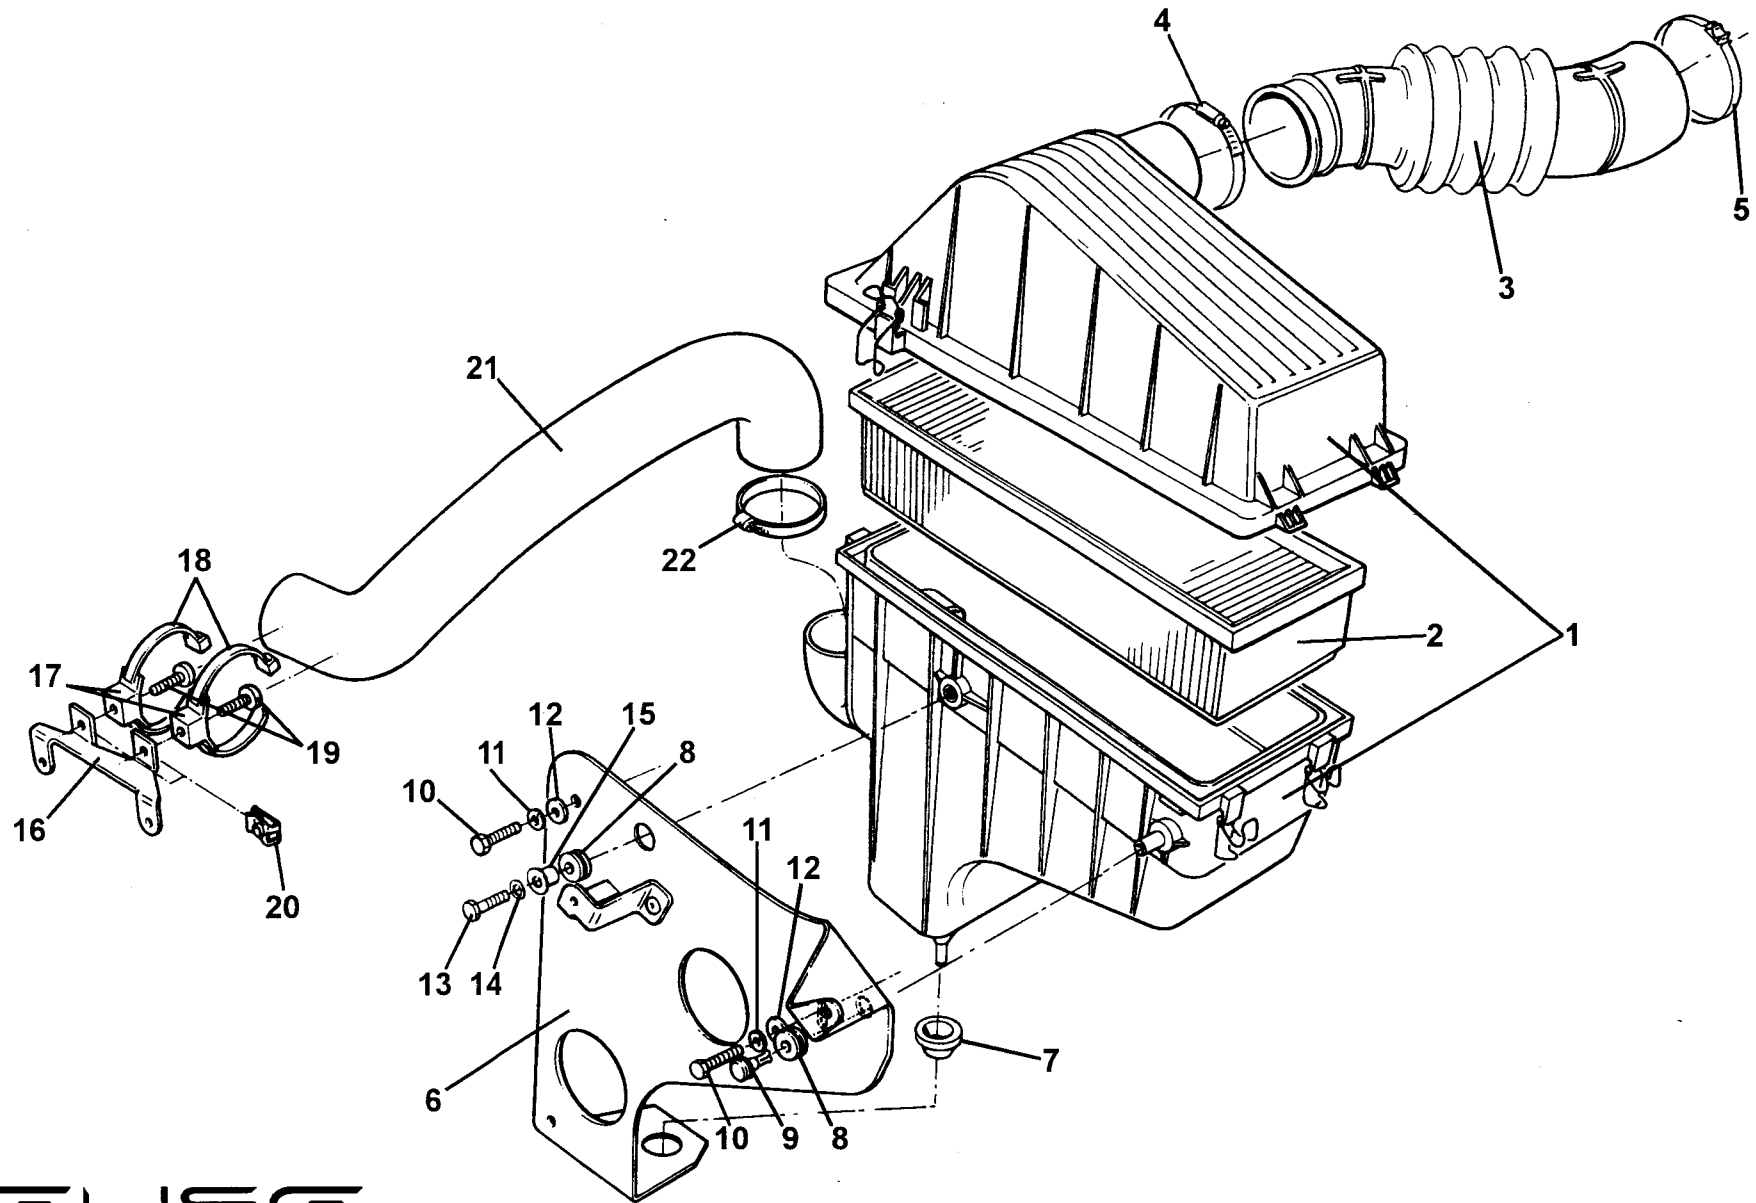



ELISE
42.01

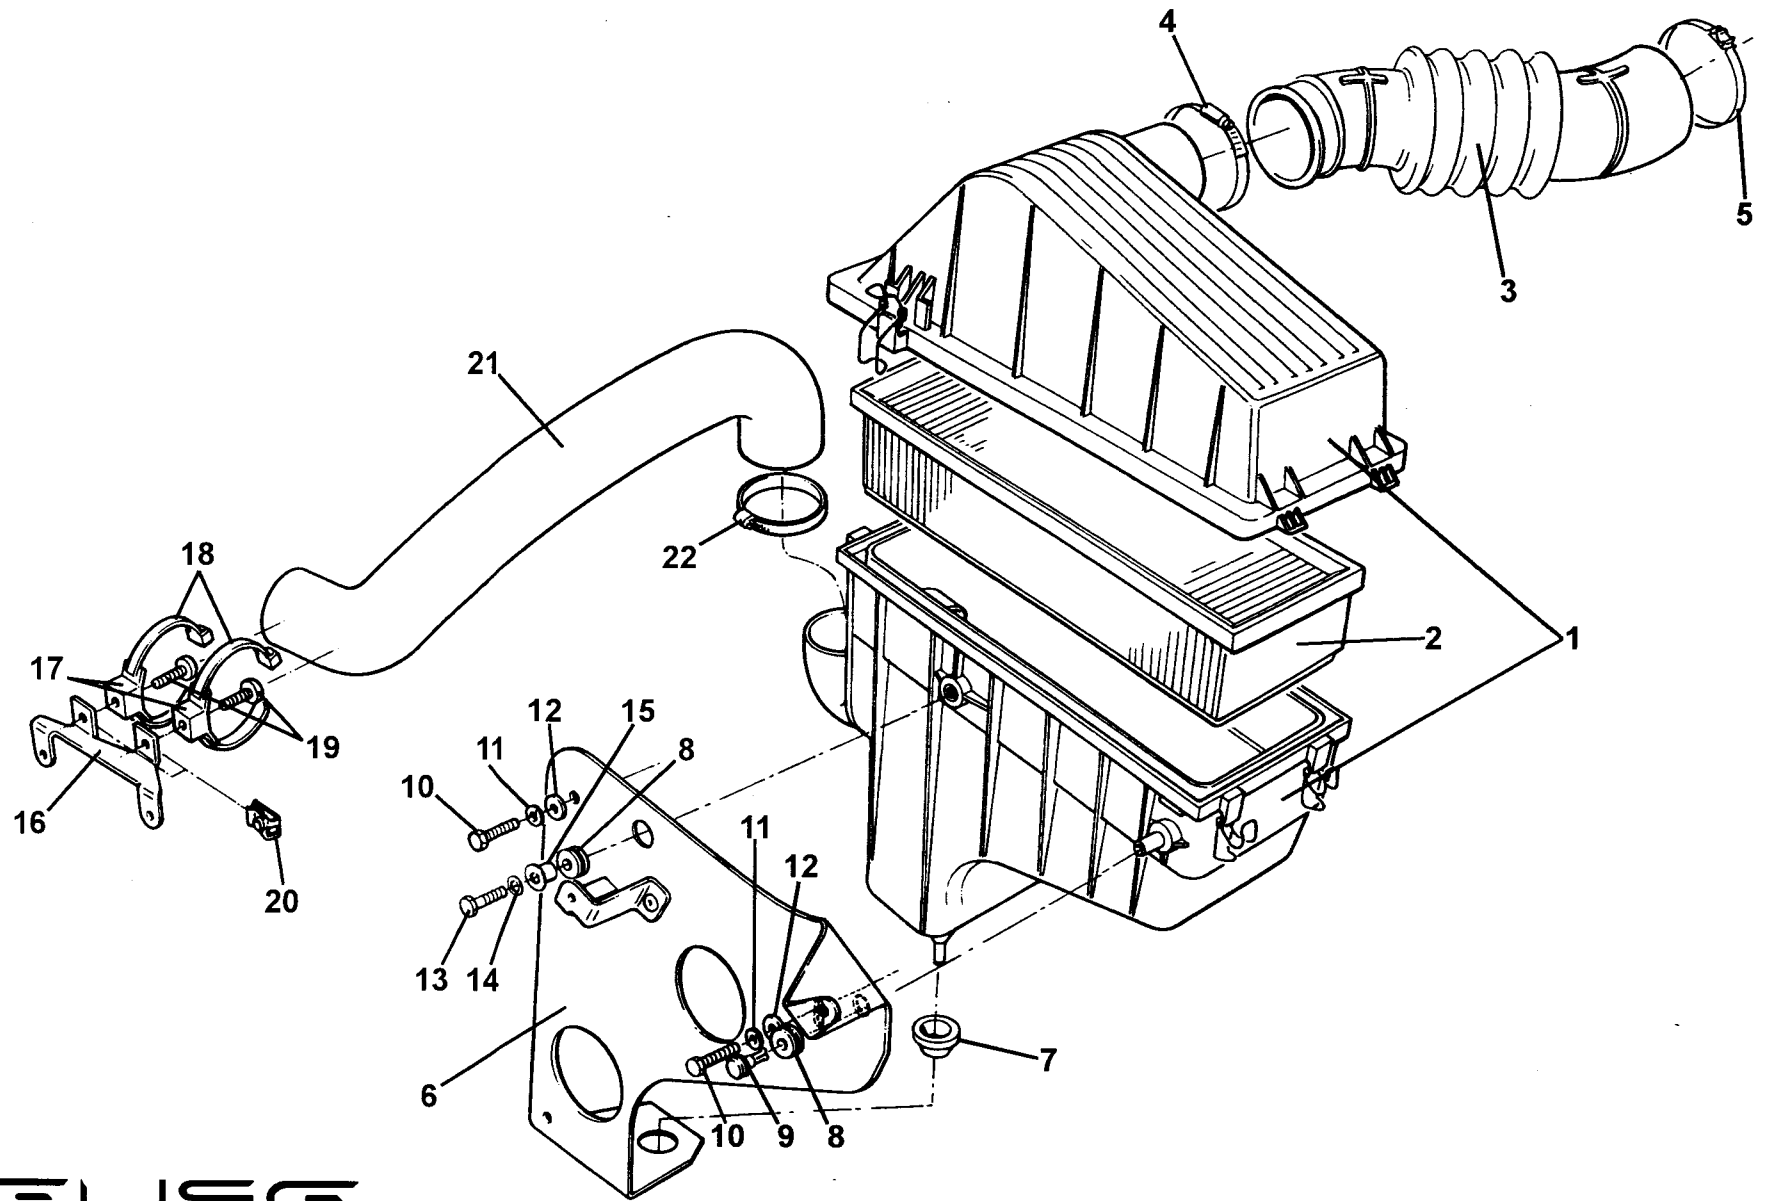

ELISE
42.01

Function Code 42.01 Airboxes, Trunking & Air Filters

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
19	Screw, M5 x 12, button hd.			A111W7138F	2
20	Spirenut, M5			B100W6372F	2
21	Intake Hose			A111E6034F	1
22	Hose Clip			A910E7004F	1

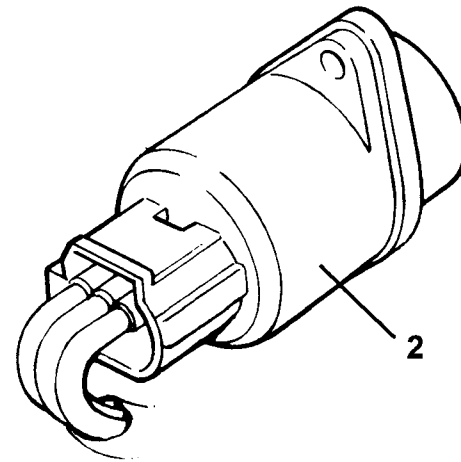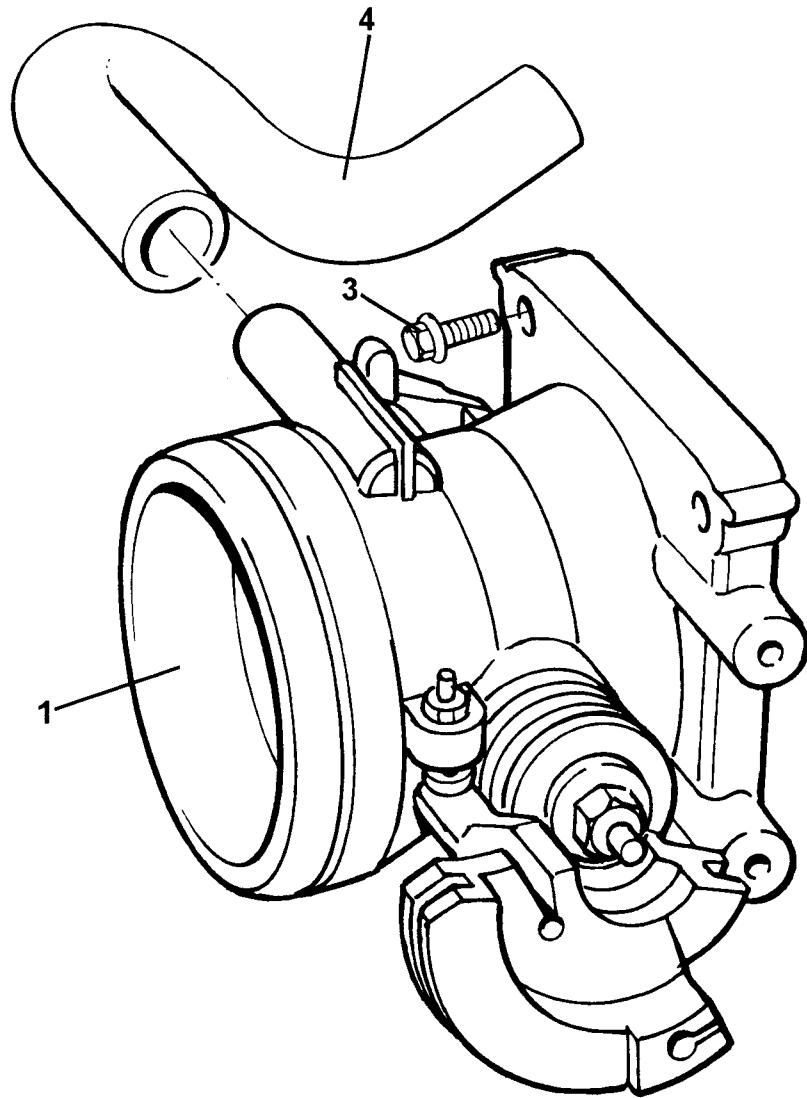


ELISE
42.04

Service Parts List **ELISE**



Function Code 42.04 Throttle Body, Mechanism & IAC Valve

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Throttle Body				1
02	Idle Air Control Valve (IAC)			A111E6132S	1
03	Screw, flg, hd., throttle body to plenum			A111E6364S	4
04	Hose, throttle body to IAC			A111E6365S	1

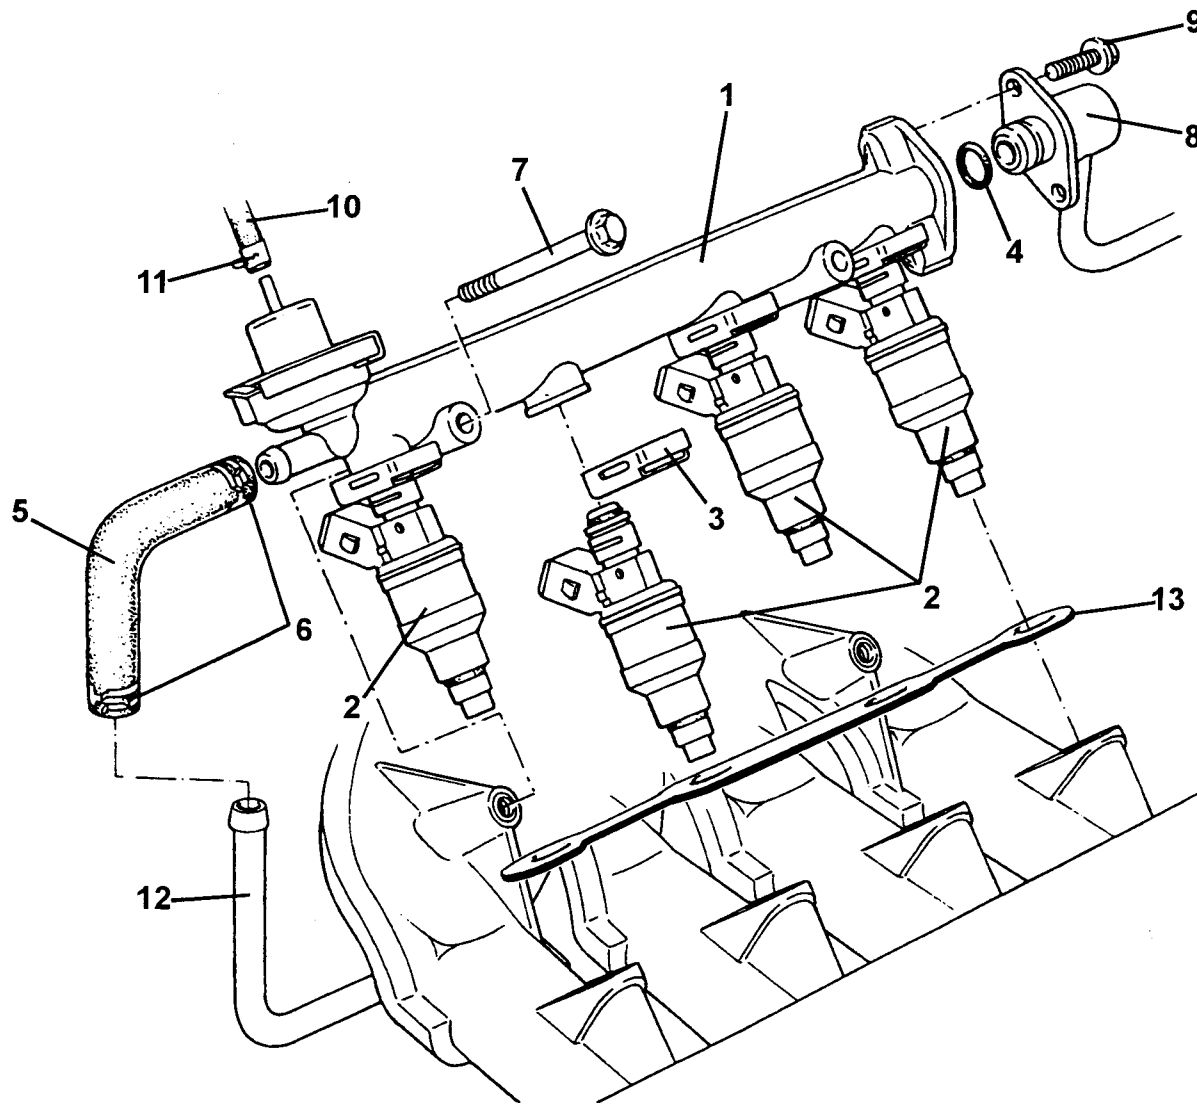


ELISE
42.05

Service Parts List **ELISE**



Function Code 42.05 Fuel Injection System

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Fuel Rail.			A111E6079S	1
02	Injector.			A111E6060S	4
03	Clip, injector retaining			A111E6162S	4
04	'O' Ring, pipe to rail			A111E6142S	1
05	Hose, elbow, fuel return			A117L6028S	1
06	Hose Clip			A111L6034S	2
07	Bolt, fuel rail to manifold			A111E6160S	2
08	Fuel Pipe Assembly, fuel feed			A111L6030S	1
09	Bolt, pipe to rail			A111L6035S	2
10	Vacuum Hose, regulator to manifold			A111E6078S	1
11	Hose Clip, vacuum hose securing			A111E6161S	1
12	Fuel Pipe Assembly, fuel return			A111L6046S	1
13	Injector Holding Plate, plastic			A117E	1

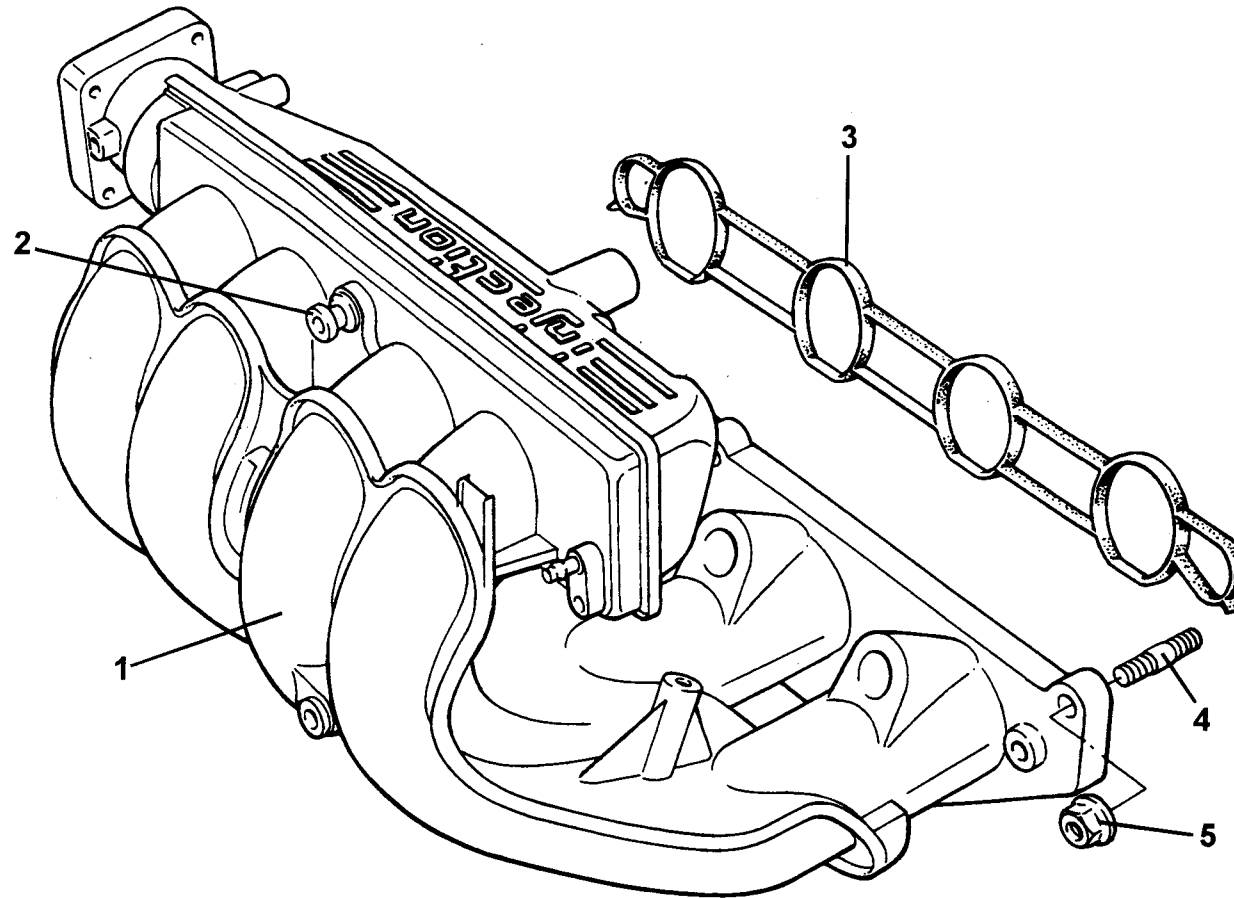

ELISE
42.07

Service Parts List **ELISE**



Function Code 42.07 Inlet Manifolds, Plenum & Gaskets

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Inlet Manifold				1
02	Vacuum Pipe Union			A111E6327S	1
03	Gasket, inlet manifold (green)	Also see section 40.02		B111E6086S	1
04	Stud, inlet manifold			B111E6081S	7
05	Nut, inlet manifold fix.			A111E6326S	7